


# AIR Telescope

## Instruction for installation

AIR T300, AIR T500

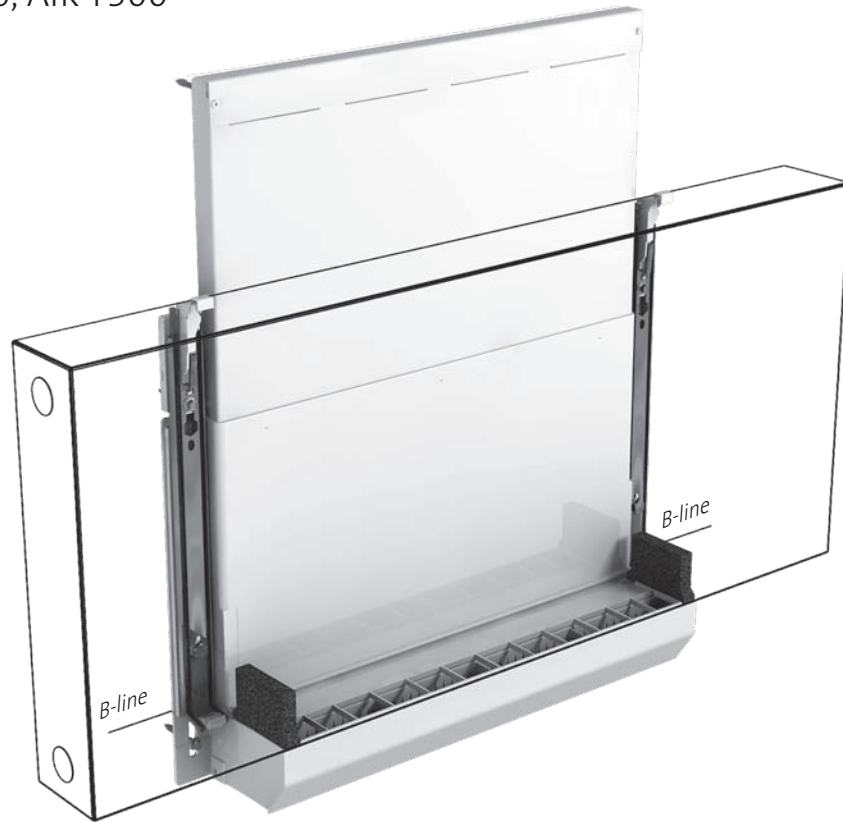

### Details



1 Remove cover



2 Attach sealing



3 See MANUAL for Air Installation

### AIR Telescope dimensions

