



Förinställning, Pre setting, Voreinstellung, Préréglage, Esisäätö, Forindstilling

FV22

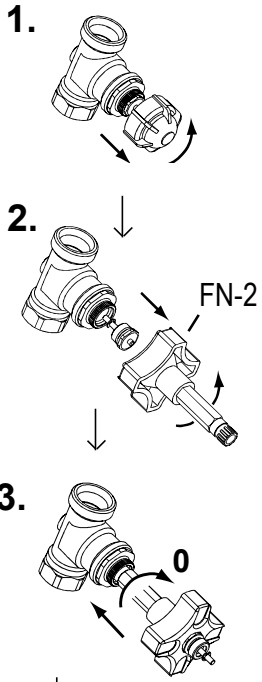





Öppningsvarv **N** gäller för:
Turns open **N** valid for:
Öffnungsumdrehungen **N** gilt für:
Tours d'ouverture **N** concernant:
Avauskierrokset **N**:
Åbningsomdrejning **N** gælder for:

Alt.1

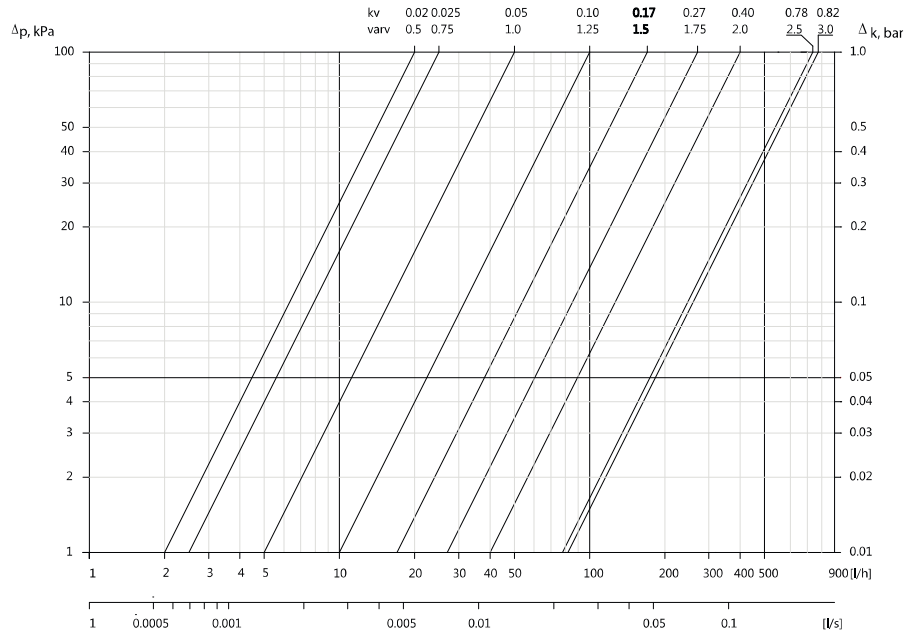



Öppningsvarv **N** gäller för:
Turns open **N** valid for:
Öffnungsumdrehungen **N** gilt für:
Tours d'ouverture **N** concernant:
Avauskierrokset **N**:
Åbningsomdrejning **N** gælder for:

Alt. 2

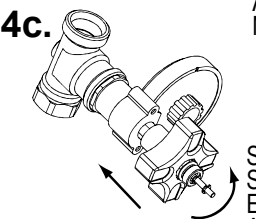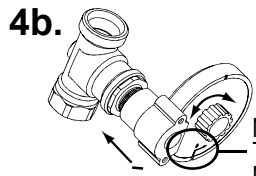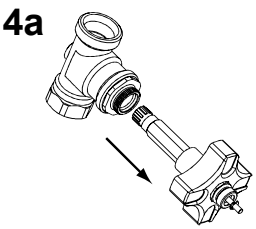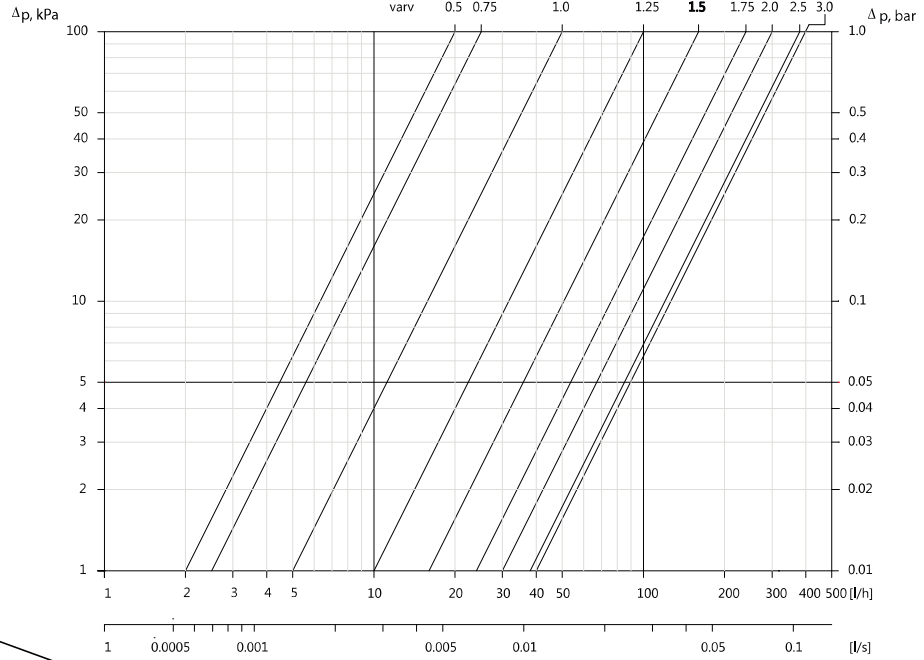


Nollställ
Turn to zero
Nullstellung
Mettre à zero
Aseta näyttötaulu nolnaan
Nulstil

Ställ in K_v
Set K_v
Einstellung K_v
Afficher K_v
Aseta haluttu K_v
Indstil K_v

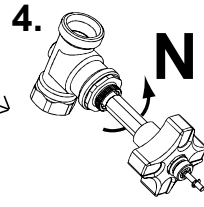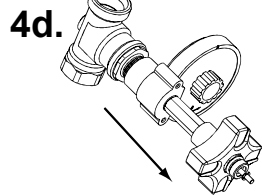

Alt. 1 / Alt. 2

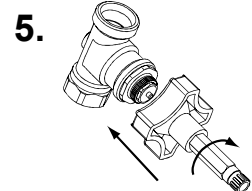

Inställning med verktyg FV 22 gäller endast 2K.
Setting by means of the FV 22 tool only valid for 2K.
Voreinstellung mit Werkzeug FV 22 gilt nur für 2K.
Réglage à l'aide de l'outil FV 22 valable seulement pour 2K.
FV 22 esisäätötyökalua käytetään vain 2K.
Indstilling med værktøjet FV 22 gælder kun for 2K.