



Montage- und Betriebsanleitung

Flores, Flores M, Flores C, Flores CM | 01.05.2023

DE

EN




Flores M

Flores



Flores C M

Flores C



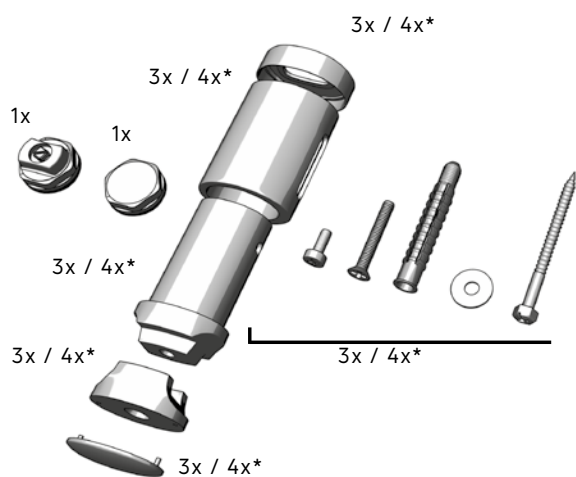


*3 pcs:
FLORES,
FLORES M,

*4 pcs:
FLORES C,
FLORES C M,

max.
110 °C




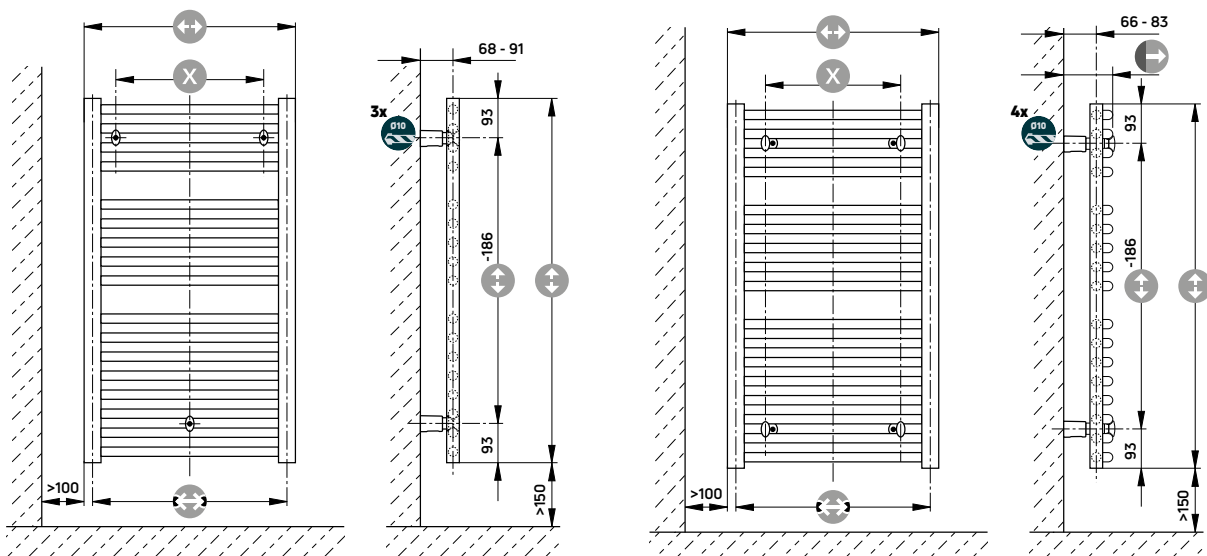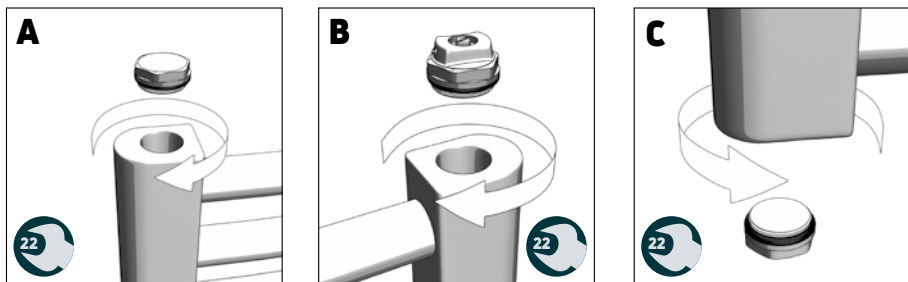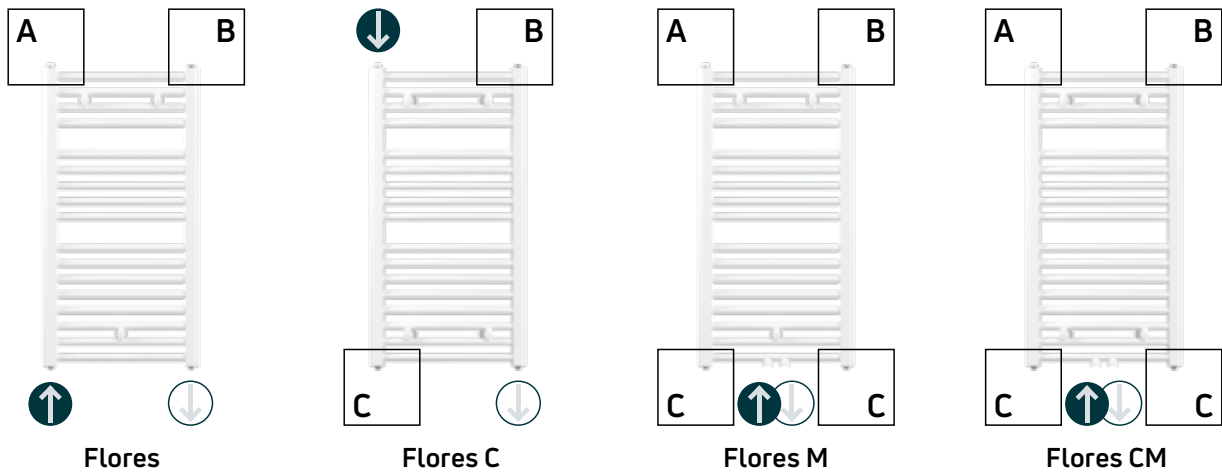

Bauhöhen und Baulängen - Flores / Flores C	
 [mm]	862, 1222, 1537, 1807
 [mm]	450, 500, 600, 750

Abmessungen Flores		
 [mm]	 [mm]	 [mm]
450	300	405
500	350	455
600	450	555
750	600	705

Abmessungen Flores C				
 [mm]	 [mm]	 [mm]	 [mm]	 [mm]
450	250	90	405	95 - 117
500	300	95	455	100 - 123
600	400	100	555	109 - 132
750	550	105	705	109 - 132

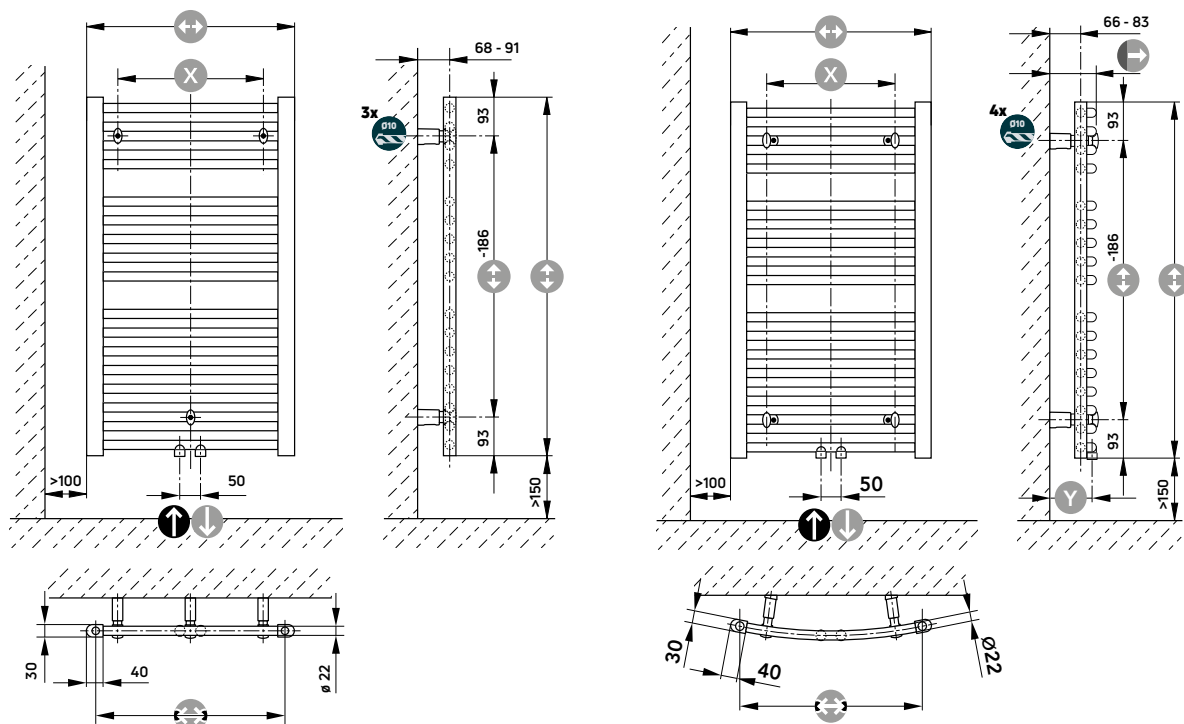

Bauhöhen und Baulängen - Flores M / Flores C M


 [mm]	862, 1222, 1537
 [mm]	450, 500, 600, 750

Abmessungen Flores M

 [mm]	 [mm]	 [mm]
450	300	405
500	350	455
600	450	555
750	600	705

Abmessungen Flores C M

 [mm]	 [mm]	 [mm]	 [mm]
450	250	405	95 - 117
500	300	455	100 - 123
600	400	555	109 - 132
750	550	705	109 - 132

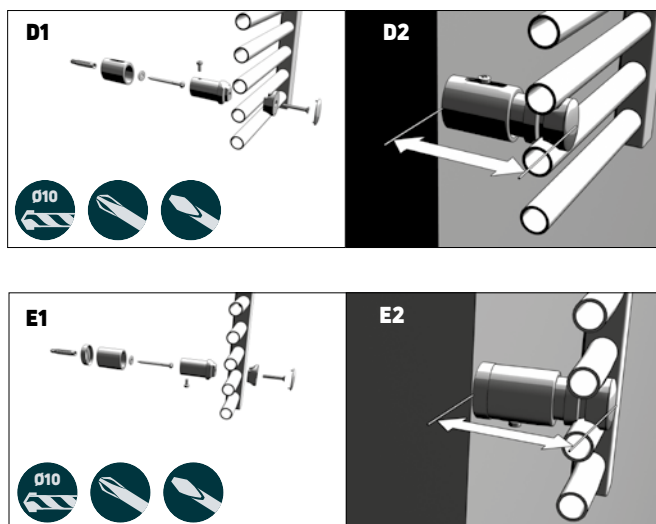Flores /
Flores MFlores C /
Flores CM

Installation/Montage u. Inbetriebnahme

Bei der Montage von Heizkörpern ist zu beachten, dass die Befestigung von Heizkörpern so dimensioniert wird, dass sie für die bestimmungsgemäße Verwendung und vorhersehbare Fehleranwendung geeignet ist. Hierbei sind insbesondere die Verbindung mit dem Baukörper sowie dessen Beschaffenheit, die Geeignetheit des Montagezubehöres und die möglichen Belastungen nach erfolgter Montage zu prüfen.

Anschluss

Anschluss an die Zentralheizung

- Dieser Heizkörper, der für den Anschluss an die Zentralheizung bestimmt ist, wird leer geliefert.
- Der Anschluss an die Zentralheizung erfolgt entweder über 2 Gewindebohrungen mit ½" oder über ein 4-Wege-Ventil.

Hinweise zum bivalenten Betrieb mit einer optionalen Elektro-Heizpatrone

- Stellen Sie sicher, dass das Gerät immer mit dem Ausdehnungsgefäß verbunden ist (sowohl im Sommer als auch im Winter) und korrekt mit Wasser gefüllt ist (durch Entlüften des Heizkörpers), bevor Sie den elektrischen Teil einschalten.
- Für den elektrischen Betrieb muss das Ventil des Heizkörpers geschlossen werden; das Rücklaufventil muss in Stellung „auf“ sein, sodass der Heizkörper mit der Zentralheizung verbunden bleibt, um die Ausdehnung der Flüssigkeit zu kompensieren.
- Bei Betrieb über die Zentralheizung müssen das Aus- und Rücklaufventil geöffnet und das Gerät abgeschaltet sein. Das Einschalten des Geräts, ohne dass dieses korrekt mit Wasser gefüllt wurde, führt zum Verlust der Gewährleistung (Abnutzung des Heizelements).

Pflegehinweise

Der Heizkörper darf bei Wartungsarbeiten nicht in Betrieb sein. Stellen Sie daher sicher, dass das Ventil ganz geschlossen ist und falls eine Heizpatrone angeschlossen ist, diese ausgeschaltet ist. Um die Lebensdauer des Heizkörpers zu verlängern, empfehlen wir die folgenden Hinweise zu beachten:

- Reinigen Sie die Oberfläche des Heizkörpers mit lauwarmem Seifenwasser (verwenden Sie keine Scheuermittel oder ätzenden Produkte).
- Benutzen Sie ein trockenes Tuch (ohne Lösungsmittel), um das Ventilset/die Anschlussesamatur/den Thermostatkopf (je nach Ausführung des Anschlusses) und die Heizpatrone (falls vorhanden) zu reinigen.

Installation/Montage u. Inbetriebnahme

For the correct installation of radiators it is essential that the fixing of the radiator is carried out in such a way that it is suitable for intended use AND predictable misuse. A number of elements need to be taken into consideration including the fixing method used to secure the radiator to the wall, the type and condition of the wall itself, and any additional potential forces or weights, prior to finalising installation.

Connection

Central heating connection

- This appliance intended for central heating installation is delivered empty.
- Connection to the central heating system should be to the two 1/2" bsp connections, or using a 4 way valve with sensor.

Mixed version appliances (with optional electrical heating device)

- Ensure that the radiator is correctly filled with water, purged of air and always connected to the central heating system to allow for water expansion.
- Note the indicated flow direction.
- When operated electrically, the radiator's outlet valve must be closed; the return must be left open to allow for expansion of water into the heating system.
- When in central heating mode, the outlet and return valves must be open and the appliance switched off. Switching on the appliance without it being correctly filled with water renders the guarantee null and void (deterioration of heating element).

Maintenance tips

Maintenance operations must be done with the heater switched off. Therefore take care the appliance is off. In order to ensure your heater lasts, we recommend you use the following few tips:

- Use only mild cleaning agents when cleaning and wiping of the radiator is necessary.
- Use a dry cloth (without solvent) for the control unit.
- Use warm soapy water for cleaning the outside walls of the heater (no abrasive or corrosive product).

Informationen / information

Produkthinweis / product reference

Produkttyp / product model

Optionen / options

Kaufdatum / purchase date

Lieferant / supplier

Telefonnummer des Lieferanten / supplier phone number

Rechnungsnummer / invoice n°



PG GERMANY

Lierestr. 68
D-38690 Goslar
T: +49 (0)5324-808-0
www.purmo.com/de-de