



FILL UP BOARD

Tinos / Langila / Tara
Paros / Sanbe / Levo

How to use with a towel bar:




OR

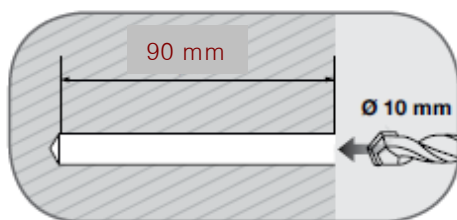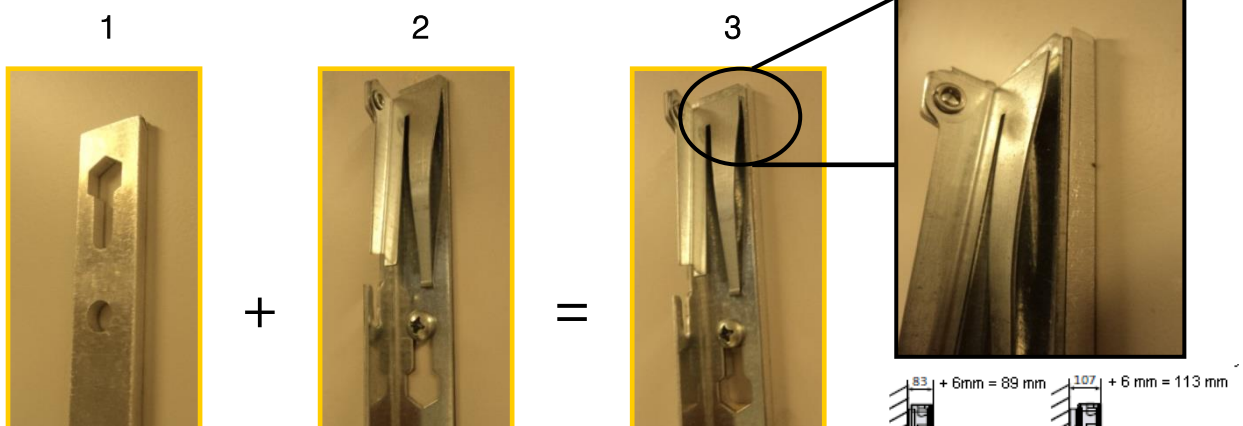

20 mm more deeper drilling!

6 mm
more
distance
from the
wall!

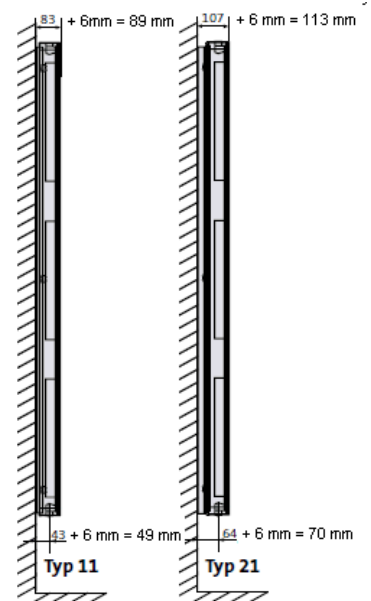

(When no towel bar is needed, only step 2 is sufficient)